



DOUBLE LAYER – LOOSE LAID

Flat Insulation

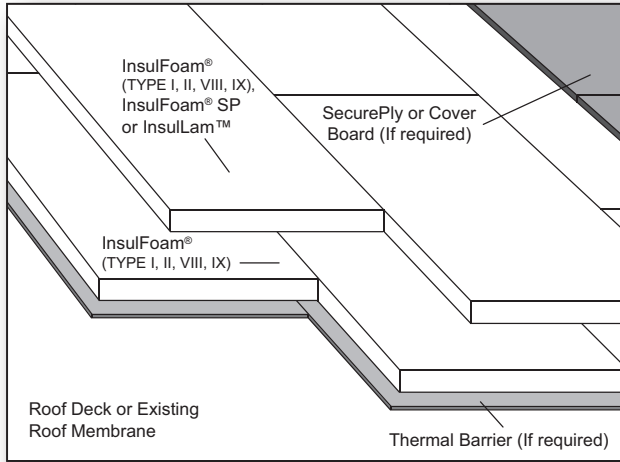

Tapered Insulation

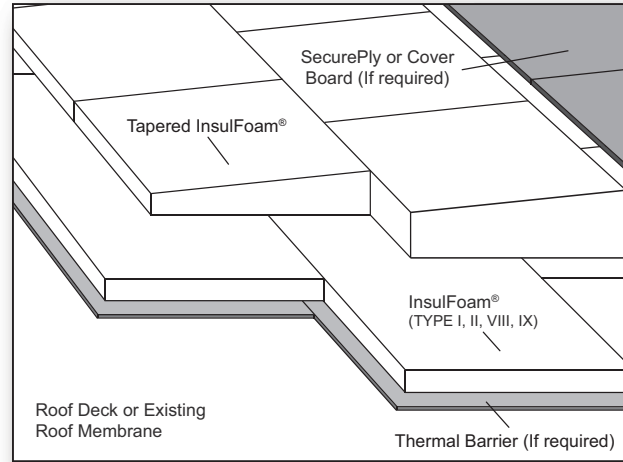

General

This specification is intended for use over any substrate suitable to receive and support a loose laid insulation roof assembly and subsequent roof membrane. It is provided to serve as a guideline for designers and installers.

Installation Considerations

- InsulFoam insulations are shipped in plastic film wraps, that are intended for temporary protection during shipping. All material should be protected from the elements and stored in a dry location.
- Install only as much insulation as can be covered by a roof membrane system, and/or made watertight by the end of each day.
- When conditions dictate, in order to prevent wind blow-off or damage during installation, the loose laid insulation should be weighed down or tacked into place with a minimal quantity of mechanical fasteners.
- InsulFoam insulations should not be exposed directly to solvent-based or petroleum-based adhesives and sealants.
- Allow approximately a 1/4" space between InsulFoam insulation and vertical surfaces or roof projections. Do not force or jam product into place.
- Review the layout of all Tapered InsulFoam systems before loading and installing panels.
- For re-cover applications, care should be taken to ensure that no moisture is trapped in the existing or new roof system.

InsulFoam insulations are compatible with most membrane systems; however, we recommend consultation with the membrane manufacturer for any limitations or approvals for use with their products.

Insulation Specifications

InsulFoam	InsulFoam SP	Tapered InsulFoam	InsulLam
Direct-to-Deck			
2NIL-IL	2NIL-SL	2NIL-TL	2NIL-LL
2NTL-IL	2NTL-SL		2NTL-LL
DensDeck Thermal Barrier			
2DIL-IL	2DIL-SL	2DIL-TL	2DIL-LL
2DTL-IL	2DTL-SL		2DTL-LL
Gypsum Thermal Barrier			
2GIL-IL	2GIL-SL	2GIL-TL	2GIL-LL
2GTL-IL	2GTL-SL		2GTL-LL
Perlite Thermal Barrier			
2PIL-IL	2PIL-SL	2PIL-TL	2PIL-LL
2PTL-IL	2PTL-SL		2PTL-LL

Thermal Installation (If required)

Some designs require the use of a thermal barrier between the insulation and occupied areas of the building. For guidance, consult local building codes, the membrane manufacturer and the Thermal Barrier information in the Insulfoam Roofing Manual.

1st Layer – Loose Laid Insulation

Install InsulFoam insulation with continuous side joints and end joints, staggered so that they are offset by a minimum of 12" from the end joints in adjacent rows. Insulation should abut tightly against adjacent boards. Joints greater than 1/2" should be filled with the same insulation that is being used in the field of the roof. If insulation is being installed over a thermal barrier or an existing layer of insulation, all joints must be offset a minimum of 6" between layers. When installing InsulFoam insulations directly to a metal deck, the edges of

the insulation parallel to the deck ribs must be solidly supported and centered on the ribs. Additionally, for metal deck installations, ensure that the insulation has a thickness that is adequate to span the rib openings. For acceptable minimum thicknesses of InsulFoam installed directly over metal decks, refer to the Roof Decks section in the Insulfoam Roofing Manual.

2nd Layer – Loose Laid Insulation

Install InsulFoam insulation with continuous side joints and end joints staggered so that they are offset by a minimum of 12" from the end joints in adjacent rows. Insulation should abut tightly against adjacent boards. Joints greater than 1/2" should be filled with the same insulation that is being used in the field of the roof. All joints must be offset a minimum of 6" between layers.

SecurePly Installation (If required)

Some specifications require the use of a slip sheet. SecurePly should be rolled out in a manner to completely cover the underlying insulation. The SecurePly must have 2" (minimum) side and end laps. To prevent movement from wind or roof top construction traffic, it may be necessary to tack SecurePly in place with a minimal quantity of mechanical fasteners.

When SecurePly is used in conjunction with these loose laid specifications, the insulation specification designation is to be modified with the two-letter suffix SL to identify that SecurePly has been loosely laid over the insulation.

Cover Board Installation (If required)

Some specifications require the use of a cover board. Cover boards may be loose laid or mechanically attached over loosely laid InsulFoam and Tapered InsulFoam. For cover board installation procedures, refer to the Cover Board Specification information in the Insulfoam Roofing Manual.

When cover boards are used in conjunction with this specification, the insulation specification would be modified with a two-letter suffix to identify the cover board type and attachment method. Refer to the Cover Board Specifications information.

Flat Insulation – Alternate

